

How to replace the lower arm of the front independent suspension on Volkswagen T5

Carry out replacement in the following order:

1

Place wedge blocks under the rear wheels.

2



Loosen the wheel mounting bolts.

3


Raise the front of the car and secure on supports.

4



Remove the front wheels.

5



Unscrew the ball joint fastening to the steering knuckle.

6




Unscrew the left arm fastener.

7


Unscrew the right arm fastener.

8




Remove the arm.

9




Install a new arm.

10



Connect the arm to the ball joint.

11



Prop up the steering knuckle.

12

Slide the arm to the subframe eyelets.

13

Tighten the right arm fastener.

14


Tighten the left arm fastener.

15



Install the wheel.

16



Lower the car and working in a cross order, tighten the wheel bolts.

AutoDoc recommends:

Check and adjust wheel alignment if necessary.

We hope that this information have been useful for you!

Video tutorials

Watch our detailed video guides about your Volkswagen T5 repair on our youtube channel. Watch video guides.



AutoDoc online

Highest quality transverse arms for your car Volkswagen T5 are available on AutoDoc. Go to the website.



How to replace the lower arm of the front independent suspension on Volkswagen T5

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

QUALITY AUTO PARTS



VOLKSWAGEN




TRANSVERSE ARMS



VOLKSWAGEN T5



TRANSVERSE ARMS FOR VOLKSWAGEN

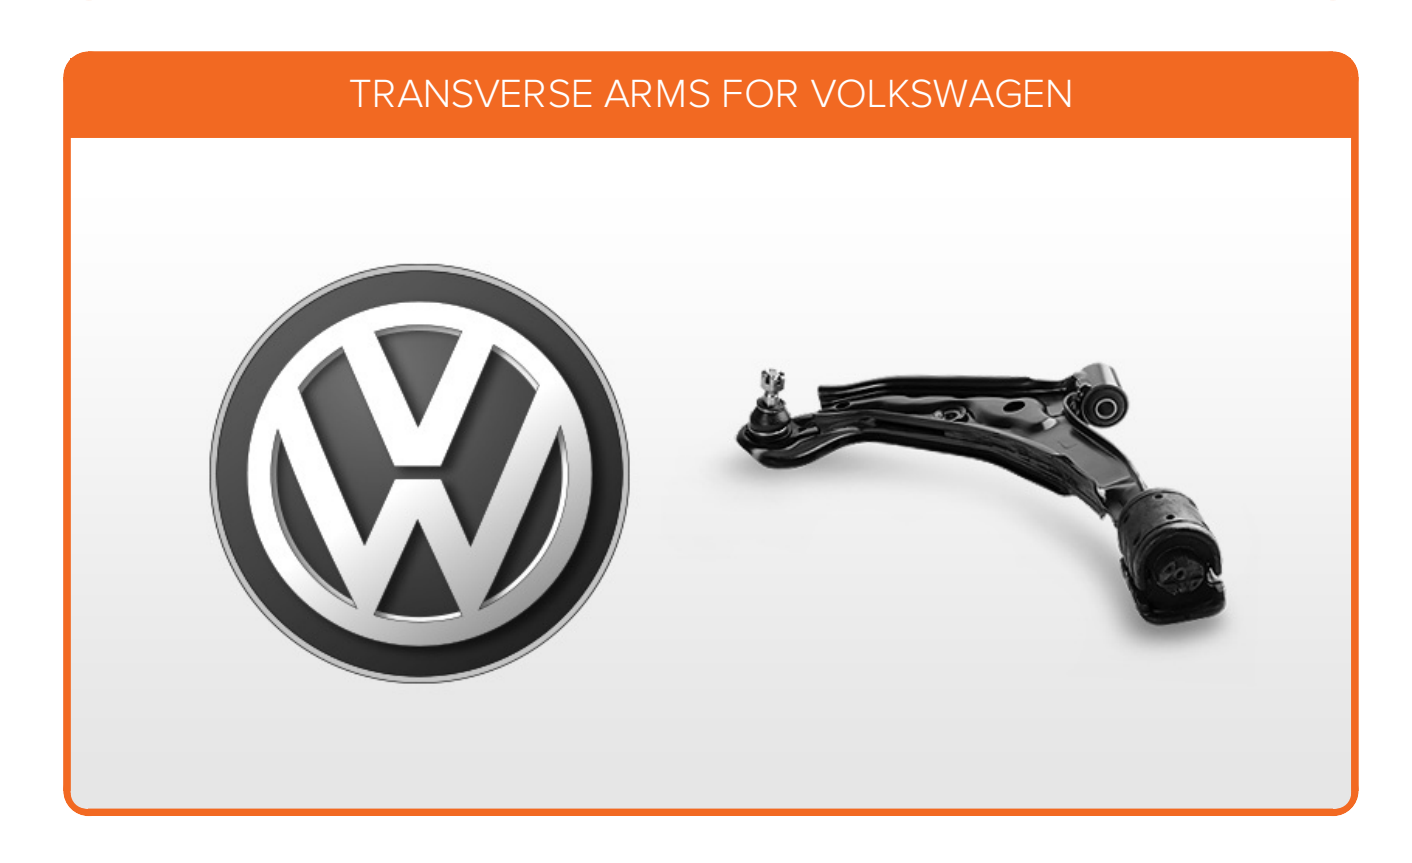

TRANSVERSE ARMS FOR VOLKSWAGEN T5



AUTODOC IN SOCIAL MEDIA